

TECHNICAL FEATURES

Amps	<10 amps
Watts	1000
Dimensions (W X D X H)	13" X 12" X 14.5"
Volts	110
Ship Wt. (lbs.)	30 lbs.



IMPORTANT SAFETY INFORMATION

PLEASE READ FIRST and FOLLOW THESE BASIC SAFEGUARDS WHEN USING THIS EQUIPMENT TO REDUCE RISK OF FIRE, ELECTRICAL SHOCK AND/OR PERSONAL INJURY.

- Plug equipment into GROUNDED outlet only. This outlet must be equipped with an approved G.F.I. (Ground Fault Interrupter)
- Keep electrical cord away and clear of water.
- DO NOT use the equipment if the supplied power cord is damaged or cracked in any way.
- ALWAYS disconnect from the power source before servicing (unplug unit from wall).
- Make sure that the brushes are placed on the machine securely before turning the machine on.
- DO NOT insert anything other than glasses on the brushes or between the rotating/spinning brushes.
- DO NOT use without the brushes in place and the air chimney in place.
- DO NOT block the side ventilation openings in any way.
- Long hair, jewelry, loose clothing CAN be caught in moving parts and pose an entrapment hazard.
- USE THE MACHINE ONLY FOR THE PURPOSE IT WAS INTENDED — drying and polishing glassware.
- USE ONLY CAMPUS PRODUCTS STEMSHINE PRO™ - GP5 replacement parts.

INSTALLATION INSTRUCTIONS

UNPACKING THE MACHINE

The STEMSHINE PRO™ - GP5 is delivered packed in a cardboard box containing compressed polystyrene. Dispose of the packing material according to the requirements of the local recycling laws. Verify the machine's integrity and in particular the electric cables. If in doubt, ask a technician to check before proceeding with installation.

POSITIONING THE GLASS POLISHER

The STEMSHINE PRO™ - GP5 does not require anchoring - but must be level on whatever surface it is sitting on. Ensure the STEMSHINE PRO™ - GP5 is not placed close to any taps and/or water connections.



ASSEMBLY — CHIMNEY and BRUSHES

Attached the hot air chimney onto the base of the STEMSHINE PRO™ - GP5 with the provided screw.

Each STEMSHINE PRO™ - GP5 is packaged with 5 brushes. There are 4 standard brushes + 1 tapered brush.

Place each brush on top of **support (B)** and slide the brush down the support. Ensure that **slot (A)** is connected by slightly rotating the brush in a clockwise direction. If the brush is not properly fixed on the support, it will not rotate once the machine is switched on.

To verify correct placement of the brushes, try to rotate them in a clockwise direction and then pull lightly upwards: if the brush does not come off the support, placement is correct.

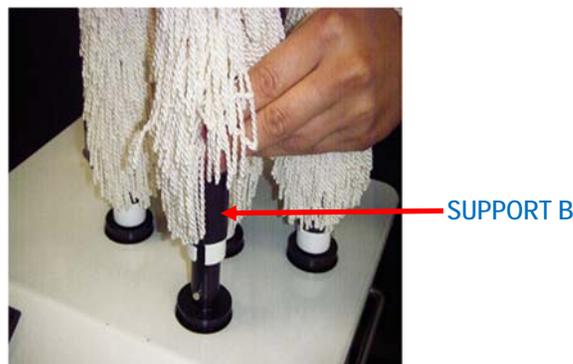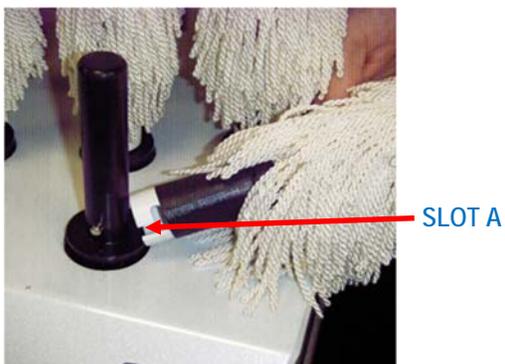

OPERATING INSTRUCTIONS

PLEASE NOTE: GLASSES MUST BE WASHED, RINSED AND STILL WET WHEN PUT ONTO THE STEMSHINE GP5-PRO BRUSHES FOR EXCEPTIONAL RESULTS!

Remove the glasses, clean and wet, from the glass washer. Place the glasses, one by one, on the warm, dry brushes for drying and polishing and then remove them, ready for immediate use.

DAILY OPERATION:

Ensure the glass drier is placed in a location where the operator will find it comfortable to operate.

Insert the plug into the nearest socket.

Press the "Power" button located on the front of the dryer to start up the machine.

- i) The button will illuminate indicating there is power to the unit.
- ii) The brushes will begin to rotate
- iii) The element heats up
- iv) The fan will begin to circulate increasingly warm air around the brushes.

IT IS NOT NECESSARY TO APPLY PRESSURE WHEN HOLDING THE STEMWARE AGAINST THE BRUSHES

PLEASE NOTE: the glass drier does not clean stemware, or remove any stains on the glasses.

At the end of the day or once all stemware has been dried and polished, allow the brushes to dry out by running the machine for an additional 15 minutes prior to turning off the machine.

CARE and MAINTENANCE INSTRUCTIONS

DAILY CLEANING

The glass polisher needs to be cleaned on a daily basis.

1. Turn the machine off and unplug it.
2. Remove the brushes as follows:



To remove the brush from the support, rotate the brush in a counter clockwise direction while gently pulling it upwards. Remove the brush completely by slipping it off its support.



3. Place the brushes evenly on the flat rack or dish rack of your dishwasher (either laying down or standing up). Ensure they do not overlap one another.
4. Run them through a regular wash cycle in your high temperature dishwasher - **TWICE**.
5. After the second regular wash cycle is complete, rinse the brushes with plenty of fresh water to remove soap and chemical that is applied during the wash cycle.
6. Allow the brushes to drip dry overnight on the rack.
7. In the morning, place the brushes back onto the spindles. Turn the brush in a clockwise direction to lock in place. Be sure that the brushes are correctly inserted onto the spindles.
8. After all brushes are placed on the spindles / support, plug in the machine and turn the power on. Run for approx. 15-20 minutes or until dry.

WARNING: Do not place the glass drier in a container with water because it contains electrical parts that could be damaged and cause electric shock to the operator once it is switched back on.

Remove the brushes from the warm water and **allow them to drip dry overnight before replacing the brushes onto the STEMSHINE GP5-PRO glass polisher**. To replace the brushes, ensure the connecting slot (A) – shown on page 8, is inserted on the top of support (B). If the brush is not properly fixed on the support, it will not rotate once the machine is switched back on. To verify this, once the brush has been replaced try to rotate it clockwise and then pull it gently upwards: if the brush does not come off it has been placed correctly.

Then turn the STEMSHINE PRO™ -GP5 back on and run for approx. 15-20 minutes to complete the drying of the brushes.

CARE and MAINTENANCE INSTRUCTIONS — continued

ORDINARY MAINTENANCE

To perform any maintenance on **STEMSHINE PRO™ -GP5 glass polisher**, the machine must be turned off and disconnected from the socket. The appropriate tooling must be used together with individual protection, according to the applicable laws.

Ordinary maintenance consists of cleaning the glass polisher on a regular basis with detergents; vacuuming the interior chamber of the machine to remove lint and dust; and replacing the brushes on an annual basis. **DO NOT IMMERSE THE MACHINE IN WATER.** The control panel is particularly sensitive to humidity: if it gets inside the panel, it can short circuit the electronics.

The electric cable must be checked meticulously at least once a week, using an extra lamp, to make sure that it has no scratches (even small ones) and does not present irregularities.



If maintenance must be carried out in a poorly lit area, always employ an extra lamp to ensure that the work is executed under safe conditions according to local law requirements

EXTRAORDINARY MAINTENANCE

This maintenance must be carried out only by a qualified technician.

Extraordinary maintenance is a rare occurrence and consists essentially of replacement of one of the following items:

- a damaged component
- a damaged electric cable (scratched, or compressed)

LIMITED WARRANTY INFORMATION

CAMPUS PRODUCTS (CPI) provides a 1 year Limited Warranty from the date of purchase. This warranty covers defects in materials and workmanship (excluding the polishing brushes) In the unlikely event that you experience problems with your **STEMSHINE PRO™ -GP5 Glass Polisher**, please call our office at 866-912-3469. You will need the Serial Number along with a description of the problem. CPI will then assist you in either correcting the problem or directing you to the Authorized Service Center nearest you.

This warranty **DOES NOT** cover any accidental damage, damages caused by abuse or misuse; damages caused by using the machine for purposes other than what it was designed and intended for.

Our warranty is limited **ONLY** to the cost of repairing or replacing the warranted equipment, at Campus Products sole discretion.

To be sure your unit is properly registered and your warranty is in full force and effect **PLEASE** be sure to register your new machine on our web site at www.cpishine.com ; click on the "WARRANTY" tab.

Upon receipt of your registration, a discount coupon will be sent via email.

OR
SCAN →

