

Silent/Eco mode :

Your wine cellar has a silent/eco mode that can be activated. It's role is to diminish the speed of the fans by 20%, lowering the fan electricity consumption and noise by 20%. To activate/deactivate it, the control panel must be locked (shows a padlock icon), press and hold the power and + icons for 3 seconds. A moon shape icon will appear under the numbers to show that the mode is activated.

